



CANOR , spol. s r.o., Strojnícka 1, 080 06 Prešov, Slovakia

Tel./Fax: + 421 51 7710 396,

e-mail: canor-audio@canor-audio.com, <http://www.canor-audio.com/>

CANOR CD1 compact disc player User Guide

Dear lover of music,

thank you, that you have purchased our CANOR CD1 compact disc player. To preserve and maintain the best characteristics of your compact disc player, we recommend you carefully read the following lines.

Safety instructions

Please, read before placing the device in action.

1. Read the instructions - all safety information and instructions should be read before using the compact disc player.
2. Keep instructions - security and user instructions should be stored for possible later use.
3. Follow the instructions - all the security and user instructions should be followed.
4. Water and moisture - amplifier should not be placed near water, for example near the baths, swimming pool, kitchen sink, etc..
5. Accessories - do not use accessories not recommended by the manufacturer.
6. Location - do not put a device on the fragile backing. The device may fall, which can cause serious injuries to children or adults, as well as damage to the device. Use only backings or stands recommended by the manufacturer or sold to dealers at the same time with this device. Any location of the device should be in accordance with the manufacturer's instructions and only accessories recommended by the manufacturer should be used.

7. Wall mounting - the device should be mounted on the wall only if the manufacturer recommends.
8. Ventilation - equipment should be placed so that it guarantees it a good airflow. This means that it must not lie on the sofa or upholstered furniture, in the working condition it must not be covered. It would then prevent proper air flow around the vent holes of device.
9. Heat – the device must be located so as to avoid the heating from heat sources, for example heaters or stoves or other heat-producing equipment. The distance from the rear wall of the device may not be less than 20 cm, and 30 cm above the area of the amplifier may also be no obstacle.
10. Power source - the device must be connected only to a power supply, for which it is proposed.
11. Power cord - it is necessary to pay particular attention to a power cord, it must be positioned so as to avoid stepping on it and to ensure it is protected against mechanical damage.
12. The longer the period during which you do not use the compact disc player – you should disconnect the power cord from the mains supply, or at least turn off the main power switch located at the rear of the device.
13. Subjects containing liquid - do not place these objects (vases, flower pots), so that they can fall on the device, possibly a fluid could leak out of them on the compact disc player.
14. Damage requiring service - equipment should be repaired only to qualified service once:
 - a) power cord is damaged
 - b) the device fell into the water or was poured
 - c) the device was exposed to rain
 - d) the device works incorrectly
 - e) the device fell to the ground or is otherwise mechanically damaged.
15. Repairs - all repairs must be entrusted to qualified service.
16. General warning - use the device only in accordance with the instructions.

This device is a high-quality CD player.

Please, carefully choose the location of the device. The unit should not be exposed to direct sunlight, high or too low temperatures, moisture, vibration and dust. We recommend placing the device in the whole equipment package down completely.

Never open the device by yourself. As long as a foreign material sinks inside, contact your dealer or directly an authorized service.

When working with keys or connecting cables do not use violence.

Do not clean down the surface of the device neither with alcohol, nor with organic solvents, the CD player might be subject to damage.

This CD player is classified as CLASS 1 LASER PRODUCT. It can emit radiation in the range of CLASS 1 limit.

Do not disassembly - danger of damage to eyes!

Delivery content

1. CANOR CD1 compact disc player
2. Power cord
3. Remote control (containing AAA batteries - 2 pcs)
4. CANOR CD1 Operating instructions

Caution!

The Waste Electrical and Electronic Equipment Directive - Regulation of the European Union 2002/96/EC governing the issue of separate waste collection.

This device may not be disposed of in unsorted municipal waste. Devolve it upon a collection center for recycling and disposal of electrical and electronic equipment waste. Correct disposal of waste does not cause negative impacts on the environment and human health. Thus contribute to protecting and improving the environment.

To help you avoid an electric shock, do not expose the amplifier to rain or moisture!

Remote Control

Insert two AAA-sized batteries into your remote control and take care of polarity.

Do not expose the sensors of your remote control to direct sunlight or to other strong light sources.

Remote control operates in an angle of 60 ° to about 5 meters. Aim your remote control at sensor on the device. In the way between sensor and remote control may stand no obstacles.

If the device is placed behind glass, it may result in shortening the operating distance of a remote control(according to the color and strength of glass).

Keys on the remote control have the same function as the keys at the front of the device. Remote Control is further equipped with following features:

volume control keys (- VOLUME +)
numeric keypad (0-9) serves the direct song selection.

Display

PAUSE - indication of short-term interruption of reproduction

TRACK - specifies the number of just reproduced track or the total number of tracks on the disc.

TOTAL TIME - indicates the total disc time

REPT. ALL - lights in repeated reproduction of all disc tracks mode

REPEAT 1 - lights in repeated reproduction of one track mode

Important information on the screen:

CD READ - lights up when checking the contents of the disc

NO DISK - lights up when there is no disc in the tray

Basic functions of reproduction

A. Opening of tray and inserting compact discs

Set the device into operation by pressing the POWER switch, after a period of approximately five seconds it is possible to insert and dismount a disc from a disc drive.

Press OPEN / CLOSE button, the tray ejects. The display lights up OPEN indication.

- make sure the tray is opened completely.

- grab hold of a compact disc for outer edges and insert it into the tray with label on the top.

Do not touch the record side (surface reflects back).

- twelve-centimeter discs insert into outer ring, eight-centimetre discs into inner ring.

Press OPEN / CLOSE button, the tray plugs-in.

The display lights up CLOSE indication. If the CD1 finds a compact disc to be in the disc drive, it loads its data, the total number of tracks, total disc time and WAITING lights up on the screen, but even further fifty-five seconds can not the device start playing. If the CD1 finds no disc to be in the disc drive, NO DISK appears on the screen.

After sixty seconds when the player is ready, you will see READY indication on display.

- the tray plugs-in even when PLAY button is pressed.

Press PLAY to display the track number (TRACK) and length (TRACK TIME).

B. Interruption of reproduction

Whereby the PAUSE button is possible a short-term interruption of reproduction. After re-pressing the button reproduction continues.

C. Completion of reproduction

Press STOP button to deactivate reproduction.

D. Reproduction of specific track

A specific disc track can be selected using the numeric keypad on the remote control. For example: to pick a track number 3, press number 3 button. To pick a track number 12 first press +10 and then the number 1 and 2.

With key automatic search I <<>> I it is possible to jump directly to the top next or previous track. Press the key search button for a short term (about half a second). These steps can be conducted both in PAUSE and STOP operation. When you press the PLAY button during reproduction, currently playing track is reproduced from the beginning.

E. Hand search

With longer pressed I <<>> I buttons at the front panel of the device is possible to search an arbitrary position within the track. When searching forward, press the right key, when searching backwards, press the left key. The search operation is possible during reproduction (reproduction is obviously biased) even in PAUSE position without associate hear-monitoring. If you reach the end of the last track during searching, reproduction begins a piece before the end of the disc.

Beware on changing the key function of automatic backward search I <<. After pressing the key, currently playing track will be reproduced from the beginning.

F. Repeat

Repetition can be operated both in random and program reproduction. For each REPEAT-key pressing it is possible to select cyclically between:

- Stopped repeating
- Repeating a single track (REPEAT 1 indication lights)
- Repeat the whole disc (REPT.ALL indication lights)

Compact disc

This device is able to play discs marked "COMPACT DISC DIGITAL AUDIO" only.

Do not store discs (not even for a short term) near by heat sources, in places with high air humidity or high dust!

Do not cover the label with pen and do not paste all over it!

Take care of damage to disc by fingernails or sharp objects!

Grasp the disc always for the edges or center. Do not touch the surface with a data record!

If it is necessary to clean the disc, use a piece of dampen cloth and dry it out with a soft cloth. Clean the disc down from the center toward the edge in principle!

If the disk becomes damp (for example during the transport from cold to warm), dry it out with a soft cloth. In no case use a hair dryer to dry out the disc!

For cleaning, do not use any antistatic agents for the current maintenance of black records, gasoline, solvents or other chemicals!

Trouble-shooting guide

If for any reason no output is observed, please refer to the trouble-shooting guide.

The compact disc player is completely broken: power cord is not properly connected to the mains.

Solution: connect the cable properly

No input signal to one or both channels:

Solution: select correct signal source using the input buttons

Verify that the input signal cables are properly connected.

Verify that the output signal cables are properly connected to the speakers.

CD player maintenance

For cleaning, use a dry piece of a fine linen. In case of large pollution, dampen a linen by diluted cleaning agent solution. There may not be used ragged materials (dishes sand), alcohol, gasoline, solvents or other chemicals!

Caution! Inside your CANOR CD1 compact disc player there are no parts or adjusting features that user can set or correct

Service

Should you encounter a problem which you are not able to alleviate or identify despite above information, please contact your dealer for further advice. Only when the problem cannot be resolved should the unit be sent to the responsible distributor in your country.

European Community Directives

This product is designed and manufactured in order to comply with existing laws of the European Community. This product is certified by testing laboratory and bears the CE mark.



Revision May 2009

Specification

Total harmonic distortion+Noise	<0.005% @ 1kHz
Frequency Response	(± 0.3 dB) 20-20,000Hz
Signal to Noise Ratio	> 100 dB (20-20,000Hz)
Output Impedance	< 200 Ohms
Output voltage	2 Veff
Power	230V, 50Hz /45 Watts
Dimensions (WxHxD)	435 x 122 x 350 mm
Weight (net)	9,6 kg